
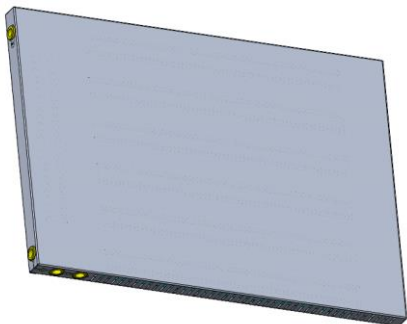


ALPAN INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

REINA

DESCRIPTION	DESCRIPTION	ILLUSTRATION
 RADIATOR x 1	Fixing choose the appropriate fixing for the wall material if required	
	PTFE tape	
	Electric drill	
	Masonry drill bit appropriate to the fixings	
	Adjustable spanner	
	Radiator valve hex key	
	Flat head and philips head screw drivers	
  END PLUG x 1  RADIATOR BRACKETS x 4  AIR VENT x 1  WALL ANCHORS x 8  RAD. SCREWS x 8	1 lock shield valve and 1 gate or thermostatic valve	
	Spirit level	
	Measuring tape	

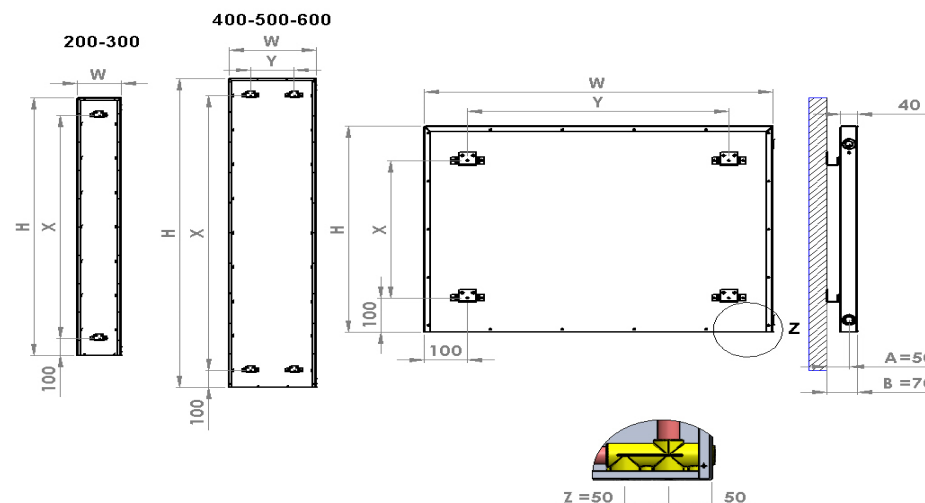

DETAIL Z

H	W	X	Y	Z	A	B	WATER V	NET WEIGHT
600	400	400	200	50	50	70	0,95	4,40
600	500	400	300	50	50	70	1,14	5,60
600	600	400	400	50	50	70	1,37	6,80
600	700	400	500	50	50	70	1,60	8,05
600	800	400	600	50	50	70	1,90	9,27
600	900	400	700	50	50	70	2,05	10,48
600	1000	400	800	50	50	70	2,32	11,70
600	1100	400	900	50	50	70	2,51	12,91
600	1200	400	1000	50	50	70	2,77	14,13
600	1400	400	1200	50	50	70	3,19	16,56
600	1600	400	1400	50	50	70	3,65	18,99
1800	200	1600		50	50	70	1,33	7,62
1800	300	1600		50	50	70	1,41	8,84
1800	400	1600	200	50	50	70	2,85	12,59
1800	500	1600	300	50	50	70	3,53	16,10
1800	600	1600	400	50	50	70	4,18	19,60
1500	200	1300		50	50	70	1,14	6,35
1500	300	1300		50	50	70	1,14	7,38
1500	400	1300	200	50	50	70	2,28	10,27
1500	500	1300	300	50	50	70	2,85	13,03
1500	600	1300	400	50	50	70	3,42	15,80

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 6 bar.